 


TWIN-TUB WASHING MACHINE

 **QUARTZ**



INSTRUCTION MANUAL



**QZSA200BPST
QZSA160BPST
QZSA140BPST
QZSA120BPST**

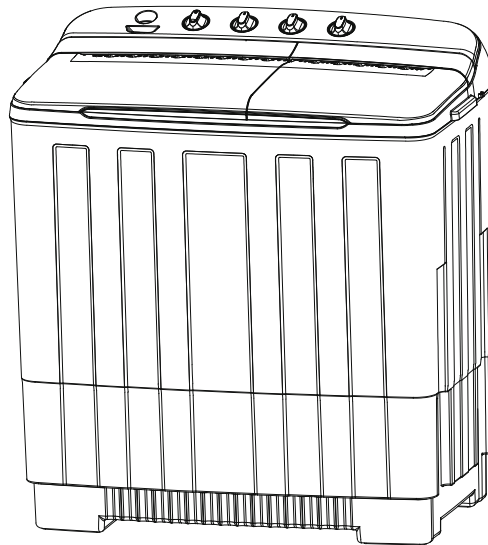









Before operating this unit, please read this Manual completely; you will be fully satisfied with the service and performance rendered by the washing machine through its long service life.

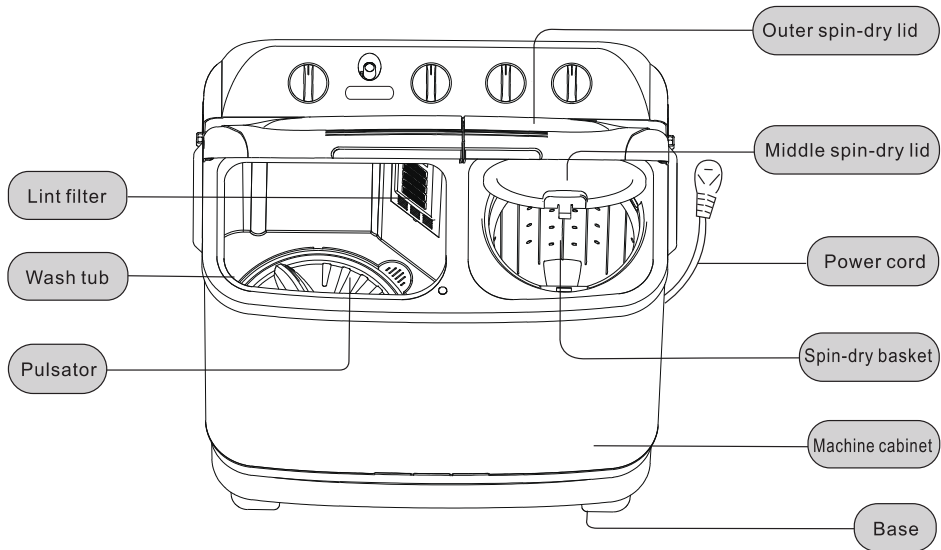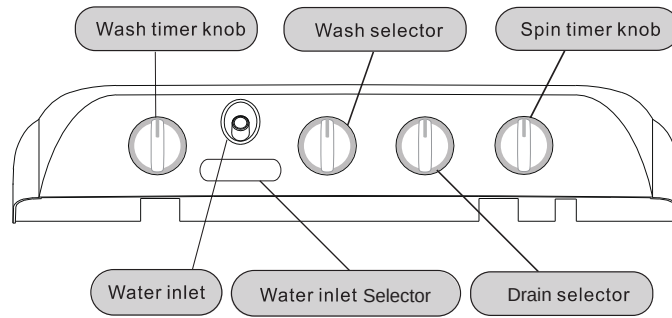NAME OF PARTS

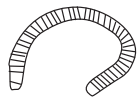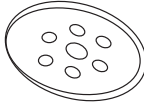


ACCESSORIES	
Inlet hose	Spinner cap
	
1	1

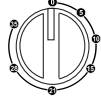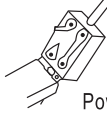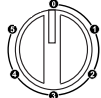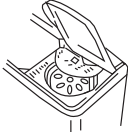TROUBLE SHOOTING

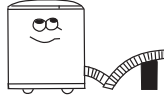Troubles	Check up		
No washing	 Is the wash timer knob at the "O" position?	 Power failure? Fuse blown?	Is the pulsator clogged?
No spinning	 Is the spin timer knob at the "O" position?	 Is the lid closed?	 Is the laundry unevenly balanced?
No drain	 Is the drain hose kept down?	 Whether the drain hose is twisted? Or whether the threshold is too high?	 Whether drain hose is frozen?
Weak washing performance	<ul style="list-style-type: none"> ■ Are the clothes too much? ■ Is the V belt too loose? ■ Is the voltage too low? 		


Notes for spinning

Distribute clothing evenly in tub

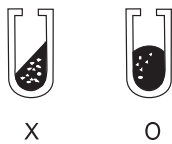

Putting the spinner cap in place



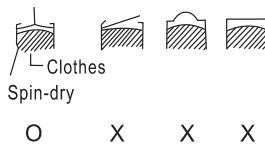



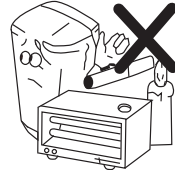


Spinner cap



Do not put hands into the rotating tub

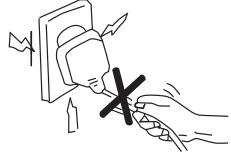

GUIDANCES FOR SAFETY AND DURABILITY



<p>Do not expose the washing machine to a direct sun light or rain.</p> 	<p>Do not install the washing machine around a damp place.</p> 	<p>Do not sprinkle water over switches.</p> 
<p>Let water drain away from the drain hose thoroughly.</p> 	<p>When plugging out the power cord, do not hold the wire.</p> 	<p>Keep children away from the washing machine.</p> 
<p>Keep the washing machine away from fire or heat source.</p> 	<p>Do not wipe the washer with volatile material, gasoline, etc.</p> 	<p>Do not pour over 50°C water into the tub.</p> 

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.


NOTE REGARDING INSTALLATION

Locate at a stable level surface

- Locate washing machine at a stable ,level surface ,(allow maximum oblique angle to 2°)
- Keep the washing machine more than 5cm from the wall to prevent a noisy sound while spinning.
- A carpet must not obstruct the ventilation openings.

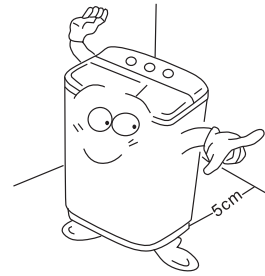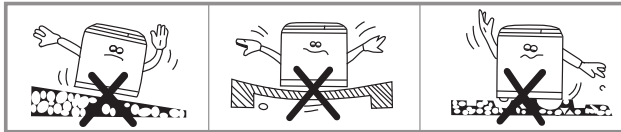


Connect the drain hose

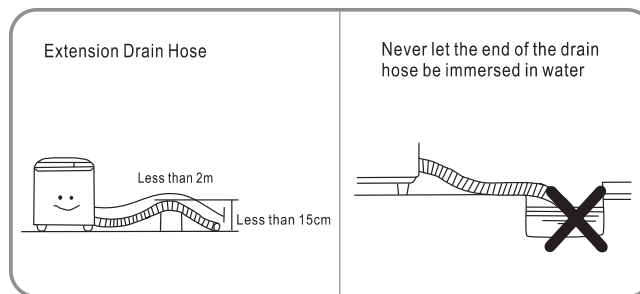

Connecting power and grounding


- Washer earth wire is connected to the power plug. Don't alter it .
- The power socket must have earth wire securely installed.
- The appliance must be positioned where the plug is accessible.

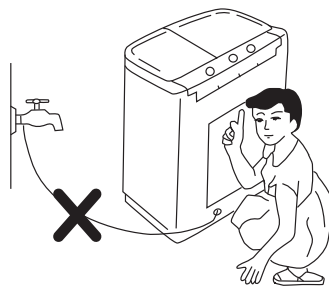

CAUTION

- Never connect the earth wire to a gas pipe ,a water tap pipe ,a phonewire or lighting rod .
- Do not use it in case, the power cord or plug have been damaged. So as to avoid electric shock and fire risk.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a qualified person in order to avoid a hazard.


PREPARATION BEFORE WASH

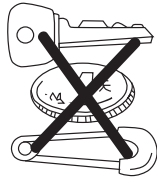


- Be sure to remove things such as keys, pins and coins from the laundry.



- Wash oily or dyed laundry separately.

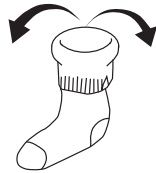

- Wash fuzzy laundry by its inner side.

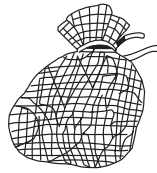


- Wash delicate clothes, wrapping them in a nylon net.



- Insert the power plug completely.
- Take down the drain hose.
- Connect the inlet hose.


Maintenance

- Remove the power plug after washing.

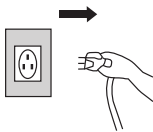

- Wipe the washer with a piece of clean and dry soft cloth.


- Must clean tubs after bleaching or starching, otherwise, some deposit will be created.

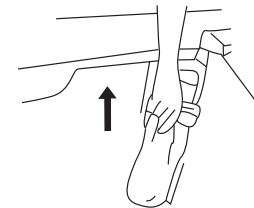


OPERATING INSTRUCTIONS

Washing

1. Set the "WASH SELECTOR" to its "Normal" position the "DRAIN SELECTOR" to its "Wash/Rinse" position
2. Turn on the water tap ,let water flow into the tub in accordance with the amount of clothing to be washed.(The marks H. M. L in tub are high, medium, low water level.)
3. Add the proper amount of detergent.
4. Put clothes in the wash tub, one article at a time.
5. Turn the "WASH SELECTOR" to select the water flow in accordance with the fabric type of the clothes.
6. Turn the "WASH TIMER" knob to the desired wash time clockwise, the washing action will start.
7. After washing is completed, drain the water by setting the "DRAIN SELECTOR" to the "Drain" position.

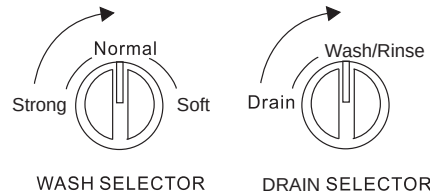

WASH ACTION	Gentle	Normal
FABRIC TYPE	Synthetics fabrics Wools	Linen Cotton Work clothes
WASHING TIME	3-5min	5-12min

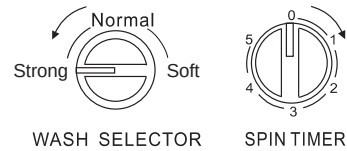


Spin drying

1. Transfer the clothing to the spin-dry tub and place the spinner cap on top of the clothing.
2. Close the inner and outer spin-dryer lids.
3. Turn the "SPIN TIMER" knob to the desired dry time Clockwise, the spin-dry will begin.

Type of the clothes	Spin-drying time
Shirts (synthetic)	1 -2 min
Undershirt	3 -5 min
Work clothes	5 min

 ✘ Any modification is not advisable afterwards.

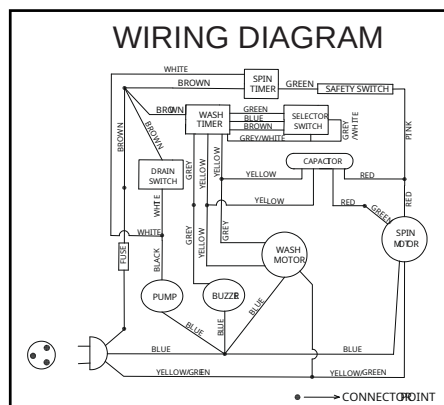

SPECIFICATION

MODEL NO.	QZAS2000BPST	QZSA160BPST	QZSA140BPST	QZSA120BPST
WASH CAPACITY	10.0KG	8.0KG	7.0KG	6.0KG
SPIN CAPACITY	7.0KG	7.0KG	7.0KG	6.0KG
WASH POWER	700W	480W	450W	430W
SPIN POWER	260W	220W	200W	200W
PUMP POWER	30W	30W	30W	30W
TOTAL POWER	990W	730W	680W	660W
POWER SUPPLY	220-240V,50Hz			
DEGREE OF WATER PROOF	IPX4			
NOISE	WASH<60DB(A)SPIN<70DB(A)			

If the washing machine has a drain pump please pay attention to the following details.

1. The operation of the washing machine with drain pump is the same as the one without drain pump.
2. When the wash selector is turned to “Drain” position, the pump begins to work. It helps with draining away water.
3. When the spin timer is turned, the spin tub begins rotating ,the pump begins working at the same time.
4. Pay attention that you should not hang the hook of drain hose higher than 1 meter from the ground .If the height is more than 1 meter, the pump may not work normally.
5. For some reasons,sometimes you will find that the pump is working but there is no water drained away. This is not a malfunction,please move the drain hose down, when there is water drained away ,hang the hook of drain hose at the height that you want .

Made in China